
## NON INON Zoom Gear EFS10-18STM

Thank you for purchasing INON product.

Package contents :	<ul> <li>Zoom Gear EFS10-18STM ×1</li> <li>Spare O-ring snip ×4</li> <li>Shade Sponge D80 Set ×1</li> <li>(Shade Sponge D80 ×1 )</li> <li>User manual ×1</li> </ul>
Compatible lens : (as of Sep. 2018)	Canon EF-S10-18mm F4.5-5.6 IS STM
Compatible port/ : Ext. Ring (as of Sep. 2018)	<ul> <li>INON Ext. Ring 36 + INON Dome Port 2 + Shade 2 Set</li> <li>INON Ext. Ring 36 + INON Dome Port 2</li> <li>INON Ext. Ring 36 + INON Dome Port 115</li> </ul>
Compatible housing : (as of Sep. 2018)	<ul> <li>INON X-2 for EOS20D, X-2 for EOS20D BK, X-2 for EOS20D BK(TM), X-2 for EOS30D BK(TM), X-2 for EOS50D/40D, X-2 for EOS60D X-2 for EOS70D, X-2 for EOS80D</li> </ul>
Preparation :	• Attach supplied [Shade Sponge D80] on Dome Port Install supplied [Shade Sponge D80] on Dome Port. <u>Make sure to use the Shade Sponge</u> to eliminate influence of camera's built-in strobe on an image. Refer to respective user manual for detail of 「Shade SpongeD80」.
Installation method :	<ul> <li>Set focus mode switch of the lens to 「AF」 position and set zoom position to have minimum lens extension.</li> <li>Make sure that 4 x O-ring snips are put in inner grooves of this product; two of them are in the front groove at 180 degree spacing and other two are in the rear groove with 180 degree spacing so that each of 4 x O-ring snips are set with 90 degree spacing each other.</li> <li>Put the Zoom Gear EFS10-18STM on the lens barrel from back side not to have rubber strips on the inside of this product override the focus mode switch or image stabilizer switch on the lens barrel and lightly press until the edge of this product matches with the front edge of the rubber band on the lens barrel. Make sure to press the Zoom Gear straightly against the lens barrel with holding the rubber band not to be displaced.</li> <li>Check that there is 7mm gap between the bottom surface of the Zoom Gear and the lens</li> </ul>

 Check that there is 7mm gap between the bottom surface of the Zoom Gear and the lens mount surface, and both surfaces must be parallel.

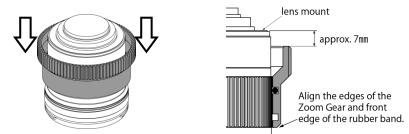

All right reserved. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopy, recording on any information storage and retrieval system now known or to be invented, without permission in writing from INON Inc.

 The Zoom Gear EFS10-18STM is fixed on the lens barrel by pressure molding of pre-installed O-ring snips on inner side of the Zoom Gear. You may have difficulty to install the Zoom Gear due to individual variety of space between the gear and the lens. In this case, take out and cut off O-ring snip(s) little by little to adjust pressure of O-ring snip(s). DO NOT cut off O-ring snips(s) too much or you cannot fix the Zoom Gear tight enough.

## Handling precautions : • Please note that lens manufacture has no concern with installation of this product on lens. Do not inquire lens manufacture about the installation. Also please note that you have to take full responsibility for the installation.

- INON Inc. cannot take any responsibility for any trouble/damage(damage to lens/lens accessories/camera) resulting from the installation.
- Should you have trouble like flooding caused by the installation, INON Inc. can not take any responsibility for incidental damage (relevant expense to take a shot etc.)
- Please perform the installation only if you can accept above conditions.

INON Inc. 2-18-9, Dai, Kamakura, Kanagawa 247-0061 E-mail support@inon.co.jp / Fax. +81(0)467-48-2178 URL http://www.inon.jp/

September 2018