

# INON

## INON Shoe Base Compatibility Chart

This chart shows Shoe Base compatibility for different housing models. Refer to user manual of the Shoe Base for detail of installation method.

Glossary: [Compatibility] "O" indicates that the Shoe Base is compatible.  
 [MB/LAB/VB] Mount Base (AD, 28LD, 28AD, M67), Lens Adapter Base (LD, M67), Video Base compatibility.

### [Compact Digital camera]

Mfr	Camera	Housing	Compat ibility	MB/LAB	RMK
Olympus	TG-5	PT-058	○	—	
	TG-3, TG-4	PT-056	○	—	
	TG-830, TG-835	PT-055	○	—	
	XZ-2	PT-054	○	—	
	TG-1, TG-2	PT-053	○	—	
	TG-820	PT-052	○	—	
	TG-610, TG-810	PT-051	○	—	
	XZ-1	PT-050	○	—	
	μ TOUGH-6020, 8010	PT-048	○	—	
	μ TOUGH-6000	PT-047	○	28AD	
	FE-3010	PT-046	—	AD	
	μ TOUGH-8000	PT-045	○	28AD	
	FE-360	PT-044	—	AD	
	μ 1030SW	PT-043	○	28AD	
	μ 1020	PT-042	○	M67	
	μ 790SW, μ 850SW	PT-041	○	AD	*1
	μ 780, μ 830	PT-039	○	M67	
	SP-550UZ, SP-560UZ	PT-037	○	—	*2
	μ 760	PT-036	○	AD	
	μ 770SW, μ 795SW	PT-035	○	AD	*1
	μ 750	PT-034	○	M67	
	μ 720SW, μ 725SW	PT-033	○	AD	*1
	μ 710	PT-032	—	AD	
	SP-700	PT-031	—	AD	
	SP-350	PT-030	○	AD	
	μ 600	PT-029	○	AD	
	C-5060WZ, C-7070WZ	PT-027	—	28AD	
	μ -40	PT-026	—	AD	
	X-3	PT-024	—	AD	
	C-8080WZ	PT-023	—	—	
	C-760UZ, C-770UZ	PT-022	—	—	
	C-5060WZ	PT-020	—	28AD	
	C-740UZ, C-745UZ, C-750UZ, C-755UZ	PT-018	—	—	
μ -10, μ -15, μ -20, μ -25, μ -30	PT-016	—	AD		
C-5050Z	PT-015	—	—		
X-1, X-2	PT-014	—	AD/M67		
C-40Z	PT-012	—	AD/M67		
C-2020Z, C-2040Z, C-3000Z, C-3030Z, C-3040Z, C-3100Z, C-4040Z, C-4100Z	PT-010	—	—		
C-200Z, C-300Z	PT-009	—	AD		
C-2020Z, C-2040Z, C-3000Z, C-3030Z, C-3040Z	PT-007	—	—		
C-2020Z, C-3000Z, C-3030Z	PT-005	—	—		

Mfr	Camera	Housing	Compa tibility	MB/LAB	RMK
Panasonic	LUMIX FT5	MCFT5	○	28LD	
	LUMIX FT3, FT4	MCFT3	○	28LD	
	LUMIX FT2	MCFT2	○	28AD	
	LUMIX FT1	MCFT1	○	28AD	
	LUMIX TZ40	MCTZ40	○	M67LAB	
	LUMIX TZ35	MCTZ35	○	M67LAB	
	LUMIX TZ30	MCTZ30	—	M67LAB	
	LUMIX TZ20	MCTZ20	○	M67LAB	
	LUMIX TZ10	MCTZ10	○	M67LAB	
	LUMIX TZ7	MCTZ7	○	M67LAB	
	LUMIX TZ5	MCTZ5	○	M67LAB	
	LUMIX TZ3	MCTZ3	—	—	
	LUMIX ZX3	MCZX3	○	M67LAB	
	LUMIX ZX1	MCZX1	○	M67LAB	
	LUMIX FX40	MCFX40	○	28AD	
	LUMIX FX35, FX37	MCFX35	○	28AD	
	LUMIX FX30, FX33	MCFX30	—	28AD	
	LUMIX FX01, FX07	MCFX07	—	28AD	
	LUMIX FX01, FX07	MCFX01	—	28AD	
	LUMIX FS3, FS5	MCFX5	○	28AD	
LUMIX FS1, FS2	MCFX07	—	28AD		

Mfr	Camera	Housing	Compa tibility	MB/LAB	RMK
Fujifilm	FUJIFILM XQ1, XQ2	WP-XQ1	○	28LD	
	Finepix F300EXR, F550EXR, F600EXR	WP-FXF500	○	M67LAB	
	Finepix F80EXR	WP-FXF80	○	M67LAB	
	Finepix Z100fd, Z200fd, Z250fd	WP-FXZ100	—	—	
	Finepix F200EXR	WP-FXF200	○	M67LAB	
	Finepix F100fd	WP-FXF100	○	M67LAB	
	Finepix F50fd	WP-FXF50	—	AD	
	Finepix F40fd	WP-FXF40	—	AD	
	Finepix F30, F31fd	WP-FXF30	—	AD	
	Finepix F10, F11	WP-FXF10	—	AD	
	Finepix F710, F810	WP-FX701	—	AD	

Mfr	Camera	Housing	Compa tibility	MB/LAB	RMK
Sony	DSC-RX100M5, DSC-RX100M4, DSC-RX100M3, DSC-RX100M2, DSC-RX100	MPK-URX1 00A	○	—	
	DSC-WX50, WX100, WX200	MPK-WH	○	M67LAB	*3

Mfr	Camera	Housing	Compa tibility	MB/LAB	RMK
Canon	PowerShot G7 X Mark II	WP-DC55	○	LDLAB	*5
	PowerShot G7 X	WP-DC54	○	LDLAB	*5
	PowerShot G1 X Mark II	WP-DC53	○	—	*5
	PowerShot G16	WP-DC52	○	LDLAB	*5
	PowerShot S120	WP-DC51	○	28LD	*5
	PowerShot SX280 HS	WP-DC49	○	LDLAB	*5
	PowerShot G15	WP-DC48	○	M67LAB	*5
	PowerShot S110	WP-DC47	○	28LD	*5
	PowerShot D20	WP-DC45	○	28LD	*5
	PowerShot S100	WP-DC43	○	28LD	*3
	PowerShot S95	WP-DC38	○	28LD	*3
	PowerShot S90	WP-DC35	○	28AD	*3

### [Interchangeable Lens Digital Camera]

Mfr	Camera	Housing	Compa tibility	RMK
Canon	EOS 6D	X-2 for EOS6D	○	*4
	EOS 70D	X-2 for EOS70D	○	*4
	EOS 60D	X-2 for EOS60D	○	*4
	EOS 40D, 50D	X-2 for EOS50D/40D	○	*4
	EOS 30D	X-2 for EOS30D	○	*4
	EOS 20D	X-2 for EOS20D	○	*4
	EOS 10D	X-2 for EOS10D	○	*4
Panasonic	LUMIX GF2	X-2 for GF2	○	*4
	LUMIX GF1	X-2 for GF1	○	*4
Olympus	OM-D E-M1 Mark II	PT-EP14	○	
	OM-D E-M5 Mark II	PT-EP13	○	
	PEN E-PL7	PT-EP12	○	
	OM-D E-M1	PT-EP11	○	
	PEN E-PL5	PT-EP10	○	
	OM-D E-M5	PT-EP08	○	
	PEN E-PM1	PT-EP06L	○	
	PEN E-PL3	PT-EP05L	○	
	PEN E-PL2	PT-EP03	○	
	PEN E-PL1	PT-EP01	○	
	E-620	PT-E06	○	
	E-520	PT-E05	○	
E-410	PT-E03	○	*2	
Nikon	Nikon 1 J4	WP-N3	○	
	Nikon 1 J3	WP-N2	○	
	Nikon 1 J2	WP-N1	○	

### [Digital Camcorder]

Mfr	Camera	Housing	Compa tibility	VB	RMK
Canon	iVIS HF M51, M52	WP-V4	○	VB	*3
	iVIS HF M41, M43	WP-V3	○	VB	*3
	iVIS HF M31	WP-V2	○	VB	*3
	iVIS HF20, 21	WP-V1	○	VB	*3

- \*1 Only following fiber optics products are compatible when using the Shoe Base to attach a strobe.  
 ・「Optical D Cable SS Type L/Cap W42 Set with Clear Photo System Film」 「Optical D Cable Type L/Cap W42 Set with Clear Photo System Film」  
 ・「Optical D Cable SS/Cap W42 Set with Clear Photo System Film」 「Optical D Cable/Cap W42 Set with Clear Photo System Film」  
 Customers using following fiber optics product to connect a camera system and strobe via Shoe Base, need to modify them with optional 「Shade Panel・PT-033/035/041/043」  
 ・「Optical D Cable/Cap W40 Set with Clear Photo System Film」  
 ・「Optical D Cable/Cap W28 Set with Clear Photo System Film」
- \*2 When attaching the Shoe Base to a housing directly, Optical D Cable/Cap Set is not usable. Use wireless connection.
- \*3 The Shoe Base can be attached only via optional compatible Mount Base/Video Base.
- \*4 「Shoe Base Adapter X-2」 is necessary.
- \*5 「Accessory Shoe Spacer for Canon」 is necessary.

INON confirms product compatibility based on a camera/housing available in Japan.

INON Inc.  
 2-18-9, Dai, Kamakura,  
 Kanagawa 247-0061 JAPAN  
 E-mail support@inon.co.jp  
 Fax. +81(0)467-48-2178  
 URL http://www.inon.co.jp/

June 2017