


INON

INON M28 Ring Adapter II for Carbon Telescopic Arm

Package contents

- | | |
|----------------------|----------------------|
| ① M28Ring Adapter II | ③ M28 Lock Ring |
| ② M6 Spacer (2mm) ×4 | ④ M28 Lock Ring Tool |

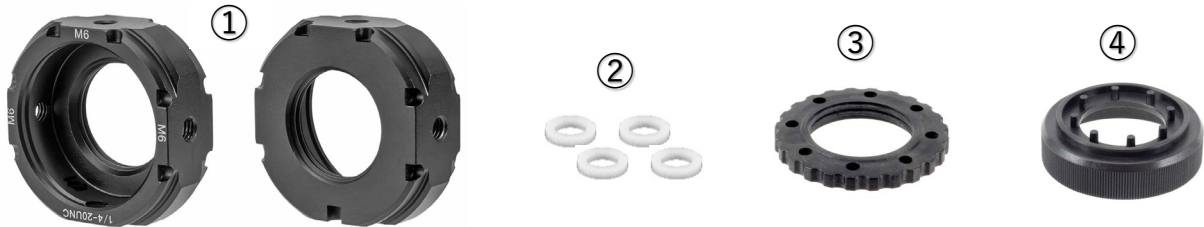

Compatibility

Arms (M28)


- INON Carbon Telescopic Arm (SS/S/M/L)

Adapters (M6)

- INON Direct Base III
- INON Direct Base YS RT
- INON Z Adapter MV
- INON Z Adapter II
- INON Z Joint
- INON Lens Holder Base (M6-M5)

Other (1/4-20UNC)

- INON Quick Shoe W27 Plate UWTP-QB1
*Packaged item of Quick Shoe Ball Head UWTP-QB1
- INON Quick Shoe W50 Plate
- INON Quick Shoe Ball Head UWTP-QB1
- INON UW 3-Way Panhead
- INON UW Tripod Hub

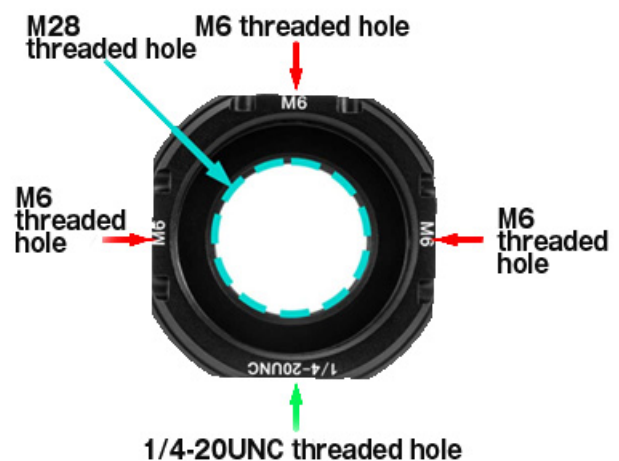

Installing on Carbon Telescopic Arm

The **M28 Ring Adapter II** can be attached to both ends (maximum two in total) of Carbon Telescopic Arm for various usages and applications.

Installing on a tip

To configure follow-cam etc.



Installing on a grip


- To attach on a tripod
- To attach a lens holder

※An INON **Mega Float Tube** cannot be attached together with this product on the same end of an INON Carbon telescopic Arm.

Installation

Installing on Carbon Telescopic Arm (M28)

- Remove the "M28 screw protective ring" of the Carbon Telescopic Arm.
- Screw the **M28 Ring Adapter II** on to the Carbon Telescopic Arm M28 threads with **flat part facing out** (as per below image), then attach the **M28 Lock Ring**.
- Tighten the **M28 Lock Ring** by using the **M28 Lock Ring Tool**.

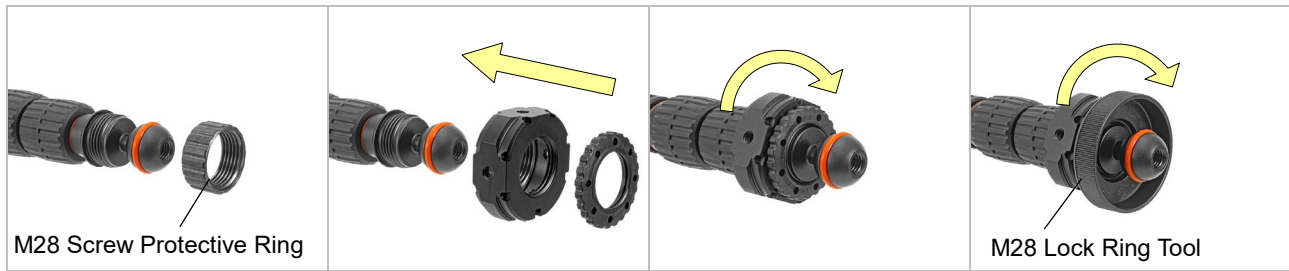


Installing Adapter (M6)

Use a hex wrench packaged with respective adapters.

Preparation

•Direct Base III

- Pull out the pre-installed M6 cap screw from an adapter.
 - Set one "M6 Spacer (2mm)" supplied with this product on the screw shaft* and put them back on the adapter.
- *Do not remove pre-installed M6 spring washer.

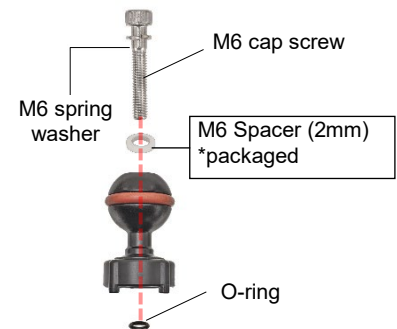


Z Adapter MV/Z Adapter II

- Pull out the pre-installed M6 thumbscrew/white washer.
- Set one "M6 Spacer (2mm)" supplied with this product on the thumbscrew shaft* then re-install the white washer and put them back on the adapter.
- For **Z Adapter MV**, attach positioning pins.



Z Joint

- Pull out the pre-installed M6 cap screw.
- Set one "M6 Spacer (2mm)" supplied with this product on the screw shaft then put them back on the adapter.

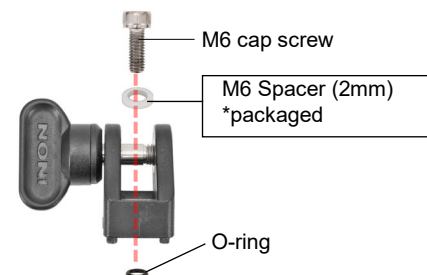

Direct Base YS RT

Lens Holder Base (M6-M5)

- No preparation is required.

Installation (common)

Align the screw tip and the locating pin (two points) on each product with the M6 threaded hole and the recess on the **M28 Ring Adapter**, then tighten securely using a hex wrench.




1/4-20UNC

Use the hex wrench supplied with each product for installation.

Preparation

●UW Tripod Hub

Attach the packaged "Panhead Spacer" to the "Upper Elevator". The anti-rotation pins should seat inside of holes of the spacer. Fasten them by tightening a cap screw inside of the "Upper Elevator" by supplied 3/16-inch hex wrench.

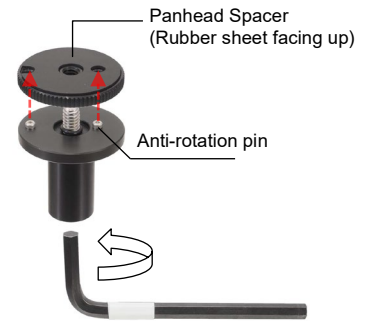


- Quick Shoe W27 Plate UWTP-QB1
- Quick Shoe W50 Plate
- UW 3-Way Panhead
- Ballhead UWTP-B1


- No preparation is required.

Installation (common)

Align the 1/4 tripod screw on each compatible product with the 1/4-20 UNC threaded hole on the **M28 Ring Adapter II**, then tighten it securely.

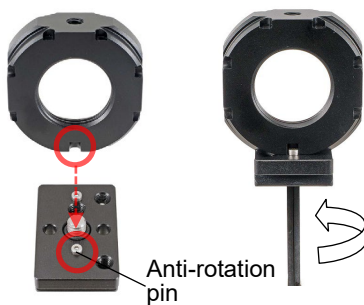

[Quick Shoe W27 Plate UWTP-QB1]
Align the anti-rotation pin on the **W27 Plate** with the recess of the **M28 Ring Adapter II**, then tighten with a 3/16-inch hex wrench.

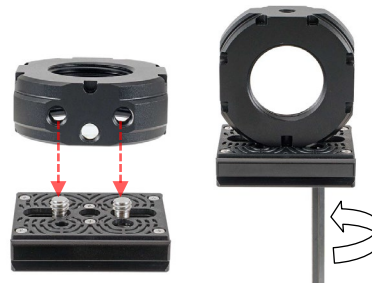

[Quick Shoe W50 Plate]
Align the two **W50 Plate** screws with the **M28 Ring Adapter II** screw holes, then tighten with a 3/16-inch hex wrench.



[UW Tripod Hub]
Tighten with a 3/16-inch hex wrench.



[UW 3-Way Panhead]
Tighten the camera lock knob first, then the tripod screw knob.



[Ballhead UWTP-B1]
Thread the 1/4-inch tripod screw into the **M28 Ring Adapter II**.

Maintenance/Storage

- After using, soak in fresh water to dissolve remaining salt or remove dirt and dry it in shaded and well ventilated area. Never apply flame or direct heat to this product or damage may result
- Store out of direct sunlight in well-ventilated, dry area. Avoid storing near chemicals, high ozone, large temperature and humidity fluctuations to avoid deformation, damage, rust, mold or corrosion etc.
- **DO NOT** clean with organic solvent like alcohol, benzene or thinner and oil and fat containing / chemical material like rust inhibitor, lubricant, polish, detergent (especially polyoxymethylene) to avoid damage/deformation/degradation of this product.
- Keep the product out of reach of children. They may swallow parts of this product. See a doctor immediately if a child swallow parts.

Handling

- When carrying, be sure not to hold only a part of the equipment to avoid accidental separation of combined products causing damage on them.

Specifications

M28 Ring Adapter II for Carbon Telescopic Arm Specifications *

Model	M28 Ring Adapter II for Carbon Telescopic Arm
Size	W48.0 x H48.0 x D25.5 mm/W1.9 x H1.9 x D1.0 inch
Weight	Air 55.0g/1.9 oz underwater approx. 33.0g/1.2 oz
MAterial/finishing	Corrosion-resistant aluminum alloy/rigid alumite

* Subject to change without prior notice

INON Inc.

2-18-9, Dai, Kamakura,
Kanagawa 247-0061 JAPAN
E-mail support@inon.co.jp
Fax. +81(0)467-48-2178
URL http://www.inon.jp/

April 2026