


INON

YS Adapter Fixing Bolt

Thank you for purchasing INON product.

Compatible strobe system

Z-240, D-2000, D-2000S, Z-220, Z-220S, Z-220F,
D-180, D-180S, YS Adapter

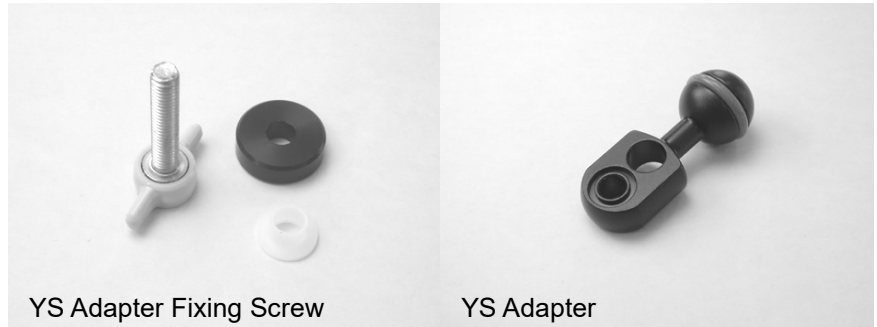

YS Adapter Fixing Screw

YS Adapter

Features

YS Adapter Fixing Bolt is necessary to attach 『YS Adapter』 on compatible strobe to link to INON Arm II System.

Package contents

- YS Adapter Fixing Bolt ×1
- Black Spacer (L) ×1
- White Spacer (S) ×1

How to attach

Put White Spacer (S), YS Adapter and Black Spacer (L) on YS Adapter Fixing Bolt in order and thread them in arm base of compatible strobe. The narrow part of the White Spacer (S) should be seated in the YS Adapter.



Maintenance

- After using, soak the YS Adapter Fixing Bolt in fresh water to resolve remaining salt or remove dirt and dry it.
- Periodically apply grease on metal part of the Fixing Screw to prevent rust.

Handling precautions

- Make sure to use supplied 「Black Spacer (L)」 and 「White Spacer (S)」 to attach the YS Adapter Fixing Bolt on compatible strobe. Using other screw or not using the 「spacer」 could *damage on strobe body resulting malfunction / flooding.*
- Also make sure that a black 「Rubber O-ring」 on the 「threaded socket(M6) for Z Adapter / YS Adapter」 (shown in above image ②-2) is not dropping off before attaching the YS Adapter Fixing Bolt. *Without the rubber O-ring, strobe body could be damaged even using supplied 「Black Spacer (L)」 and 「White Spacer (S)」 to cause malfunction / flooding*

INON Inc.

2-18-9, Dai, Kamakura,
Kanagawa 247-0061 JAPAN
E-mail support@inon.co.jp
Fax. +81(0)467-48-2178
URL <http://www.inon.co.jp/>